

# UltraStar3

## FEATURES:

Fits alloy or carbon 1 1/8' steer tubes with 22.8 to 25.2 mm internal diameter.

Fits standard M6 top cap bolts, tighten max to 2Nm.

O-Ring: 2x18mm.

Destination: Road, Cyclo-cross, X-Country, Trail ride.

## WARNINGS:

UltraStar3 should be used only for the tuning of headset bearings, their preload requires the mild torque of 2Nm max. On carbon fiber steer tubes never install UltraStar3 without a stem properly locked onto the tube.

Always remember to tighten stem clamp before riding.

(Respect manufacturer recommended torque).

UltraStar3 cannot hold a loose stem while riding.

## EXTRALITE LIMITED WARRANTY:

See Web-Shop <http://webshop.extralite.com> terms and conditions.

**EXTRALITE**


## INSTALLATION:

File the top of the steer-tube to avoid sharp edges.

Hold Lower Cone with your fingers.

Use 8mm allen key to screw in Top Cone until you can fully insert UltraStar3 into the steer tube with mild hand pressure.

Insert and tighten UltraStar3 (7-8Nm) in the steer tube at 5 to 10mm from the top.

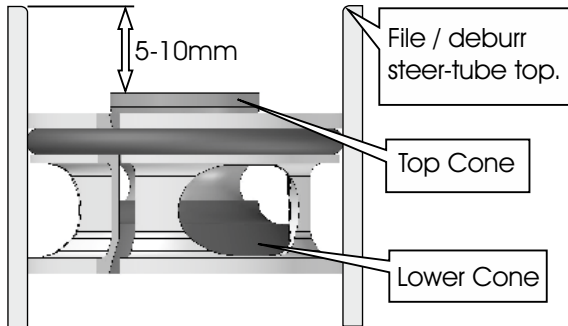

**EXTRALITE**